



(239) 938-1000 | StormSmart.com

SLIDE SCREEN SPRING PIN/PLUG INSTRUCTIONS

Each slide screen track will include one permanently installed spring pin and one adjustable plug. Once the slide screen is set in the track, insert the plug in the track. Once the plug is inserted, make sure you turn the lever in a closed position to ensure screens are secured in place. When you lower or seat the lever, if the plug is easily removed, **adjust it** by raising the lever and turning it 1/2-to-1 full turn clockwise and seat the lever again. If it is still loose, repeat the process until it is snug and not easily removed. The boat plug should be removed when the screens are removed.

See additional visuals on next page



